


Änderungen ab Geräte-Nr. 4003xxxx
Changes from serial no. 4003xxxx
Changement à partir du no. d'appareil 4003xxxx

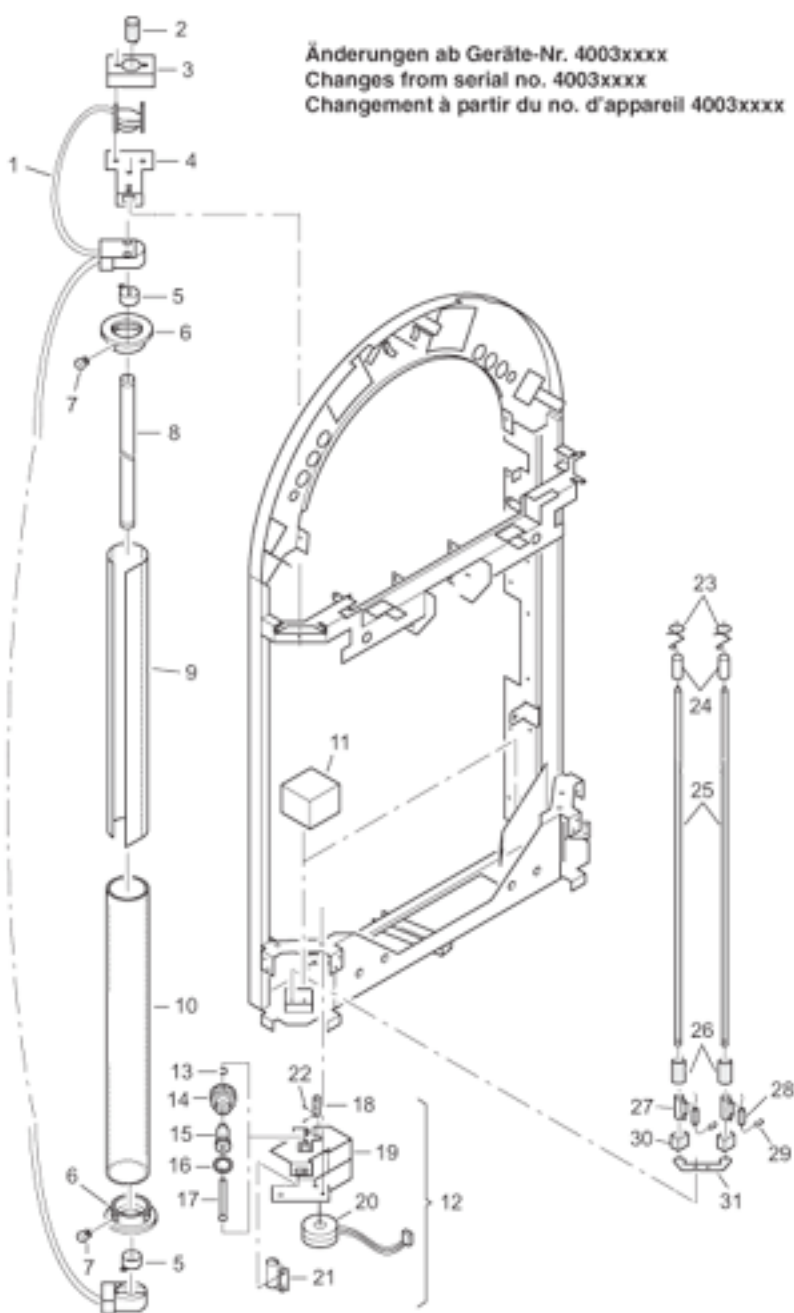

Available Parts: Fig. 4.2 - Door illumination

	No.	Door illumination
1	0056074	Loom lamp colour drum 18w EU
1	0056073	Loom lamp colour drum 18w UL
2	0012277	Starter 4-22 watts tandem S2
3	0046735	Cover f.starter holder
4	0055340	Socket LH/RH
5	0062461	Adaptor cap
6	0046210	Friction disc
7	0012969	Rivet 4x4
8	0013164	Fluorescent lamp 26 x 590 x 18W wa
9	0054785	Coloured foil
10	0054784	Tube f. colour drum 54mm
11	0060272	Plastic foam 90x90x60
12	0062574	Driving unit colour drum RH
12	0062573	Driving unit colour drum LH
13	0012453	Retaining ring 4mm
14	0012283	Gear wheel
15	0051351	Drive roll
16	0012284	Rubber ring 4x10mm
17	0051350	Bolt A5x27x25.8 SXN 07

18	0012282	Worm
19	0053594	Bracket LH
19	0053593	Bracket RH
20	0013648	Turntable motor 24v 375u 50cps
21	0013650	Capacitor 8.2MF 63v 60cps
22	0013123	Needle screw 3x4mm
23	0029083	Thigh spring
24	0058434	Protection cap f. bubble tubes
25	0012649	Bubble tube straight
26	0013216	Silicon tube
27	0009803	Heating clip
28	0013217	Resistor 120 ohms 10% 5 W
29	0013443	Tubing, silicon rubber 2,5 x 4mm, blue, yard ware
30	0040182	Plastic foam cut 12x12x12 mm
31	0002049	Fixing plate, center rh / lh